


### 22-E

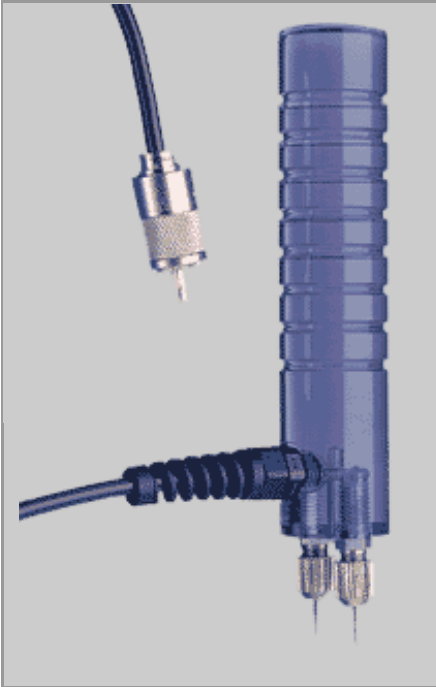


- Two pins
- 1/2" penetration
- Use on plaster, masonry and wood
- Will also take #496, insulated pins
- 1 1/16" penetration

### 26-ES



- Two pins
- 1 1/16" penetration
- Use to measure moisture content in wood at different levels of penetration
- Ideal for shell and core tests to detect moisture gradients and to test lumber with wet surfaces

### 30-E/C



- Two pins (insulated)
- 9" penetration
- Use for baled fibers, cotton, jute, etc