





## ELECTRO-HYDRAULIC

### LOAD CELLS

This model of load cells is used to monitor stresses in steel linings, struts, piles and support beams.

They consist of a pressure pad connected to a pressure transducer; the pressure pad is composed by two stiff stainless steel plates saturated by de-aired oil. Special distribution plates are also available for better load distribution between two not-parallel surfaces.

Electric cable connects the load cells to a suitable remote readout system.



### **APPLICATIONS**

- steel lining in tunnel construction
- struts in big open excavation
- pile testing

#### FEATURES

- Specially designed for steel linings and struts
- Very robust construction
- Accurate and reliable
- Suitable for installation between not-parallel surfaces
- Remote data transmission with OMNIAlog datalogger



Meets the essential requirements of the EMC Directive 2014/30/UE






### TECHNICAL SPECIFICATIONS

| Range  |
|--|
| OD   |
| Length (L)   |
| Overall size (ODxLxH)                              |
| Accuracy (linearity, hysteresis and repeatibility) |
| Signal output                                      |
| Temperature operating range                        |
| Protection Class                                   |
| Material   |
| Sensor resolution                                  |
| Power supply                                       |

| MODEL<br>0L2CE019000   | (€ |
|------------------------|----|
| 1900 KN                |    |
| 209 mm                 |    |
| 365 mm                 |    |
| 209x365x36,5 mm        |    |
| < 1% FS                |    |
|                        |    |
| 4-20 mA (current loop) |    |
| from -20°C to +80°C    |    |
| IP 68 up to 100 KPa    |    |
| stainless steel        |    |
| 0.15 KN                |    |
| from 9 to 30 V DC      |    |
|                        |    |

| MODEL<br>0L2CE030000   | (€ |
|------------------------|----|
| 3000 KN                |    |
| 264,5 mm               |    |
| 421 mm                 |    |
| 264,5x421x36,5 mm      |    |
| < 1% FS                |    |
| 4-20 mA (current loop) |    |
| from -20°C to +80°C    |    |
| IP 68 up to 100 KPa    |    |
| stainless steel        |    |
| 0.20 KN                |    |
| from 9 to 30 V DC      |    |

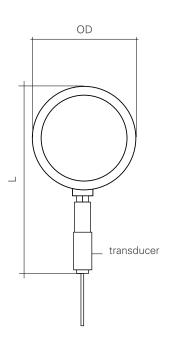



L2CE load cell with twin distribution plates

### READABLE BY







For further information refer to their own datasheets




# DISTRIBUTION PLATES

In some application is very difficult that the two abutment plates where load cell shall be installed are perfectly parallel. In this case it is possible that the load will be distributed only over a part of load cell pad or, in the worst case, only on one point. This situation can generate a peak load that can damage the cell pad and moreover do not permit to the load cell to measure the real transmitted load. To solve the problem, Sisgeo can supply as option a kit of twin distribution plates, one with convex surface and one with concave surface.

This particular shape permits an equal load distribution over the load cell pad.

| MODEL       | DESCRIPTION                        | OD     |
|-------------|------------------------------------|--------|
| 0L2CE200PD0 | Twin plates for 1.900 kN load cell | 200 mm |
| 0L2CE252PD0 | Twin plates for 3.000 kN load cell | 252 mm |

## TYPICAL TUNNEL INSTALLATION

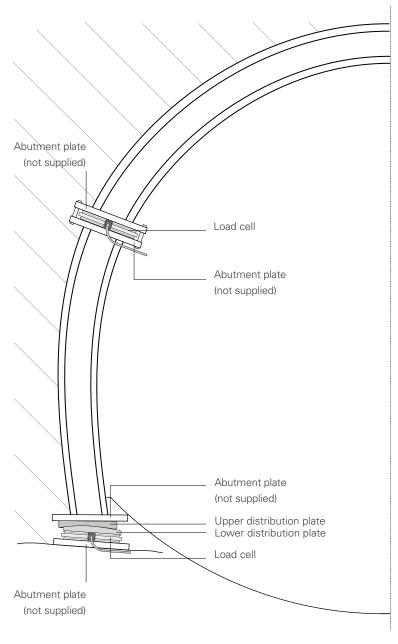



Load cell between two steel lining sections




Load cell under steel lining foot (distribution plates strongly suggested)





## TYPICAL STRUTINSTALLATION

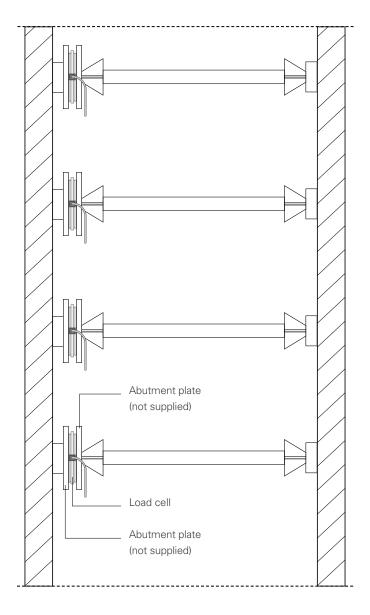



Struts in urban excavation for new Rome metro station

All the information in this document is the property of Sisgeo S.r.l. and should not be used without permission from Sisgeo S.r.l. We reserve the right to change our product without prior notice.

#### SISGEO S.R.L.

VIA F. SERPERO 4/F1 20060 MASATE (MI) ITALY PHONE +39 02 95764130 FAX +39 02 95762011 INFO@SISGEO.COM

#### ADDITIONAL SUPPORT

SISGEO offers on-line assistance service to the Customers in order to maximize the performance of the system and training on the correct use of the instrument/readout.

For more information contact mail: assistance@sisgeo.com